






In Mac system, the default shortcut keys are function keys.
In Windows system, the default shortcut keys are F1-F12.
when Fn lock is closed, you need to press Fn+Shortcut to achieve the shortcut function.(Press Fn+Esc to open/close Fn lock)


0	Red light is always on: Keyboard is charging Green light is always on: The battery is full Red blinking: Keyboard is low battery	Ē	FN Lock		Home page		Email	J	Music
0	Green light always on: NUM keypad on Green light off: NUM keypad off	44	Previous	DII	Play/Pause	DD	Next		Сору
OA	Green light always on: Caps lock on Green light off: Caps lock off	í	Paste	=}	Cut	Q	Search	t)	Back
O	Green light always on: Scroll lock open Green light off: Scrollg lock is switched off	묘	Computer		IME Toggler		Task View		Lock screen
0	Green light always on: FN lock open Tip: FN lock will switch the function of F1-F12 buttons when it is opened.		Calculators		Projector	٥	Open System Settings		

The keyboard will automatically recognize the computer system When connected to a computer; if the computer can not automatically recognize the system, please manually switch the computer system.


Fn+m: Switch the keyboard to mac OS system. Fn+n: Switch the keyboard to Windows system.

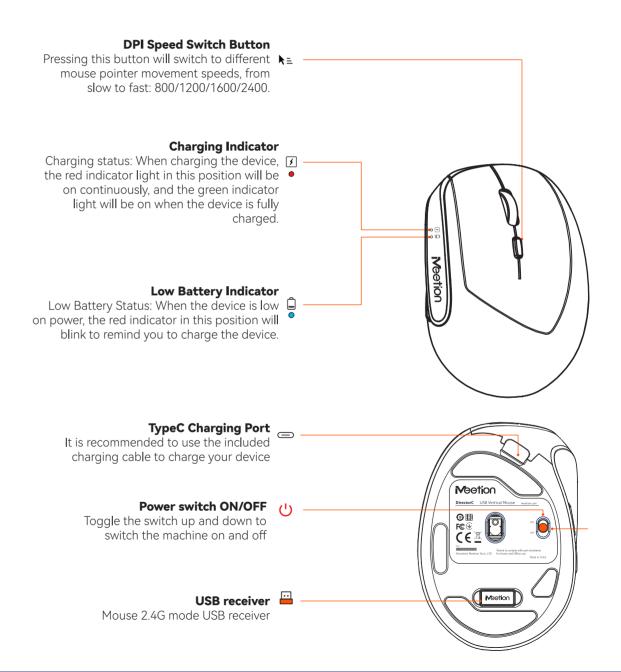


Usage Guidelines

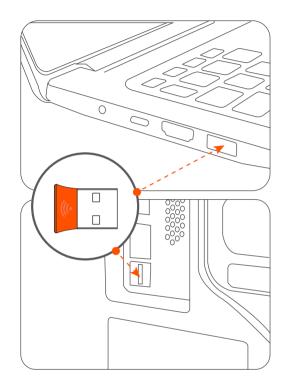

1. Insert the USB receiver into the USB port of your computer.

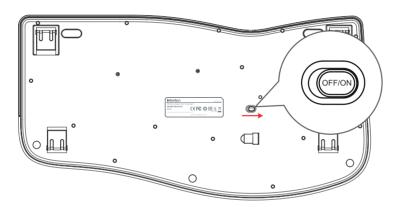

2. Toggle the switch to the right to the "ON" position to turn the unit on.

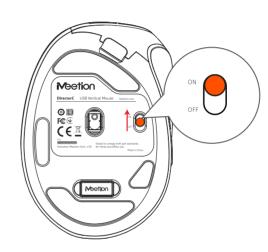

3. Toggle the switch upward to the "ON" position to turn the device on, get ready!

GENERAL

All MEETION brand products comply with US FCC standards (FCC ID: 2A706), EU CE standards/CAUK standards.

The product is made in accordance with RoHS standard.

PRECAUTIONS

- 1.This product contains a rechargeable lithium battery.
- (1)Do not dismantle, strike, crush, or put it into a fire.
- (2)Stop using it immediately if severe swelling occurs.
- (3)Do not place it in a high-temperature environment.
- 2.Do not use this device near water.
 3.Only use a dry cloth to clean this product.
- 4. Please follow the manufacturer's instructions for use.
- 5.If the device is damaged, for example, if liquid enters it, if it gets wet in the rain or becomes damp, or if it cannot operate normally, it must be repaired. For repair matters, it should be entrusted to qualified maintenance personnel.

KIND TIPS

If the product is not in use for a long time, it is recommended to charge it every three months to activate the lithium battery inside the product and prevent battery failure due to long periods of non-use.



Having technical problems with this product?
Send an email to service@meetion.com
For more information please visit:

www.meetion.com