



MK009

*Macro Definition Operation
Procedure*


meetion.com

MK009 MACRO SETTING STEPS

MK009宏定义设置步骤

Step 1: Open the software, click "**Mechanical Keyboard**" on the main interface.

步骤一： 进入主界面后点击mechanical keyboard进去下一个界面。

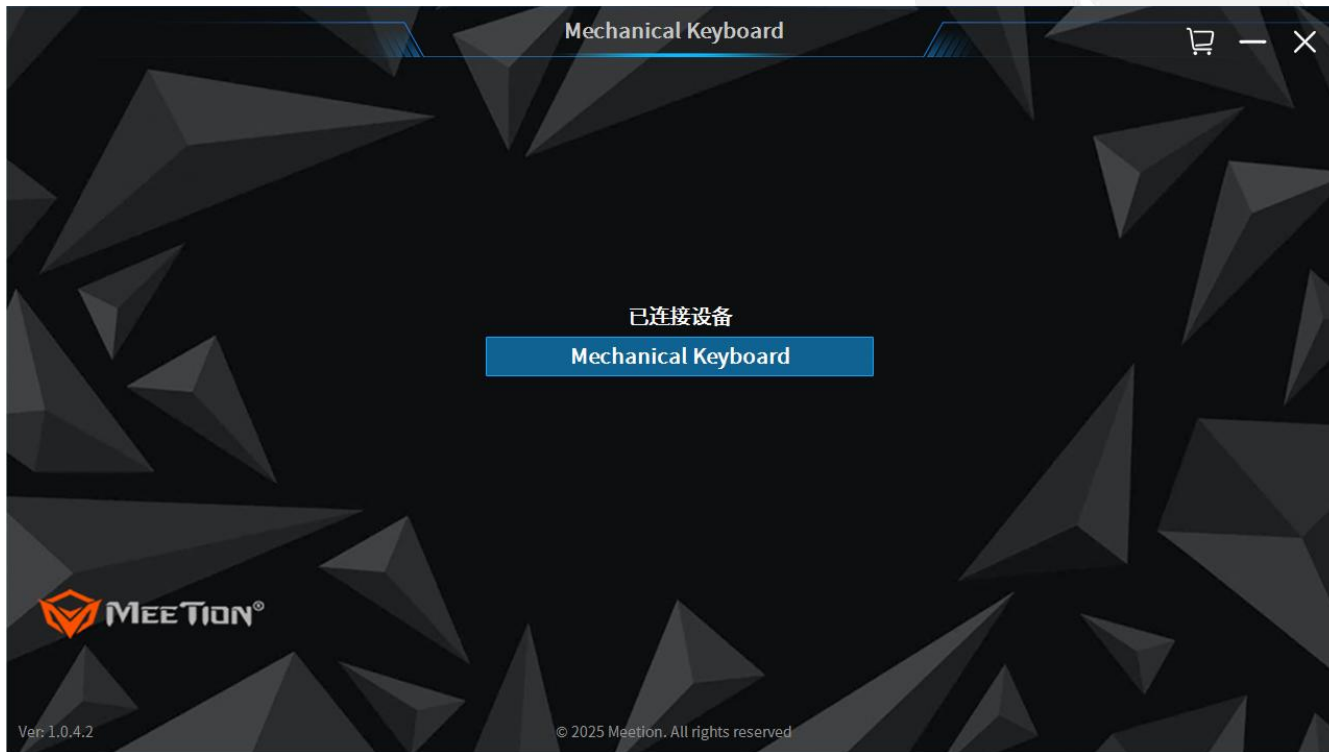


MK009 MACRO SETTING STEPS

MK009宏定义设置步骤

Step 2: Enter the menu then follow the workflow below to configure your settings.

步骤二: 进入界面后点击宏管理器，根据以下流程步骤进行设置！

①: Click **Macro Manager** ②: click the **New**—get Macro 1 ③: Click the **Record** to start.

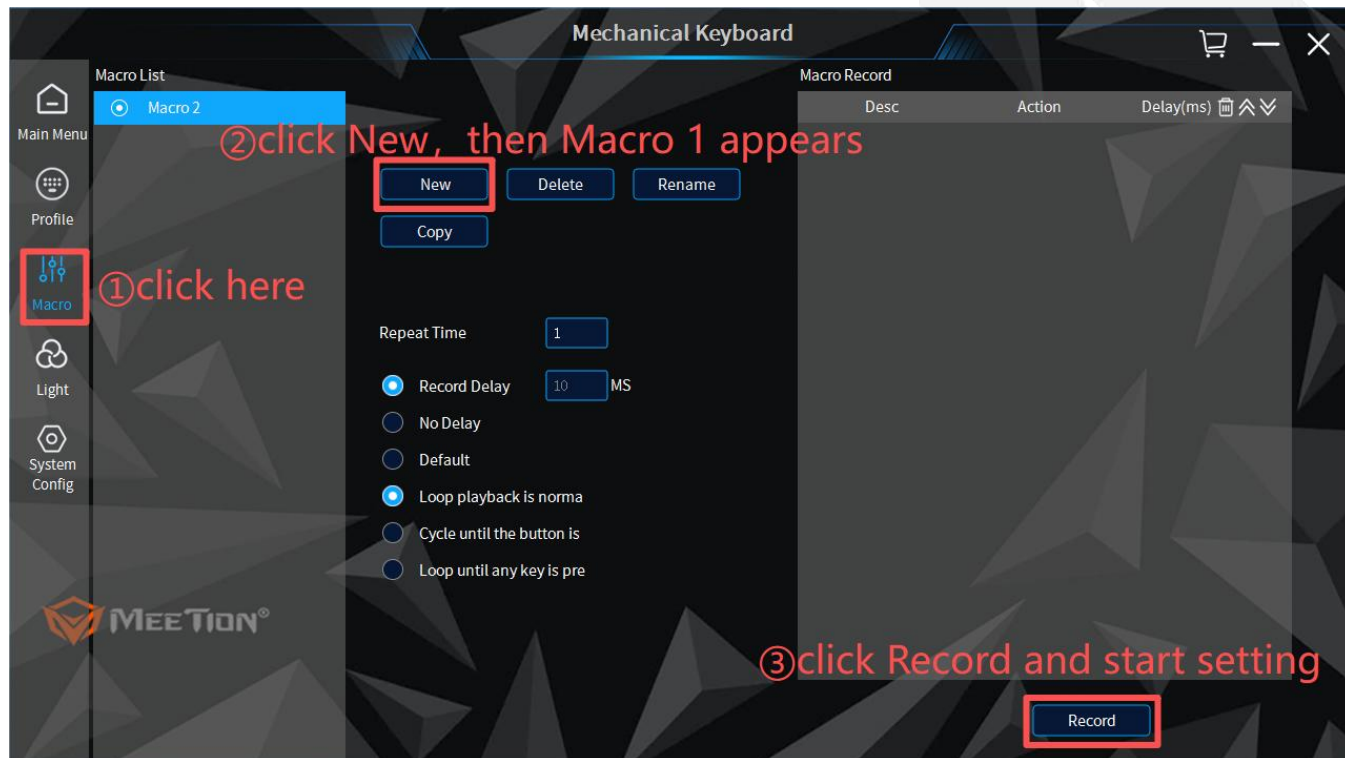

MK009 MACRO SETTING STEPS

MK009宏定义设置步骤

Step 3: ①: Completely Recording the content below, ②: click Profile interface

步骤三: 完成以下录制内容后, 切换到配置文件界面中选择设置触发按键

The screenshot displays the 'Mechanical Keyboard' software interface. On the left, a sidebar contains navigation options: Main Menu, Profile (highlighted with a red box and a circled '2'), Macro, Light, and System Config. The main area is divided into 'Macro List' and 'Macro Record' sections. The 'Macro List' shows 'Macro 1' selected. The 'Macro Record' section contains a table of recorded actions and a 'Record' button at the bottom.

Desc	Action	Delay(ms)
Q	Key Down	160
Q	Key Up	408
W	Key Down	160
W	Key Up	712
E	Key Down	192
E	Key Up	416
R	Key Down	208
R	Key Up	0


① Recording example as shown above

MK009 MACRO SETTING STEPS

MK009宏定义设置步骤

Step 4: Right-click the keyboard on the interface and select Macro from the four available options.

步骤四: 选取键盘上任意键，鼠标右击弹窗四个选项，选择宏定义后点击。

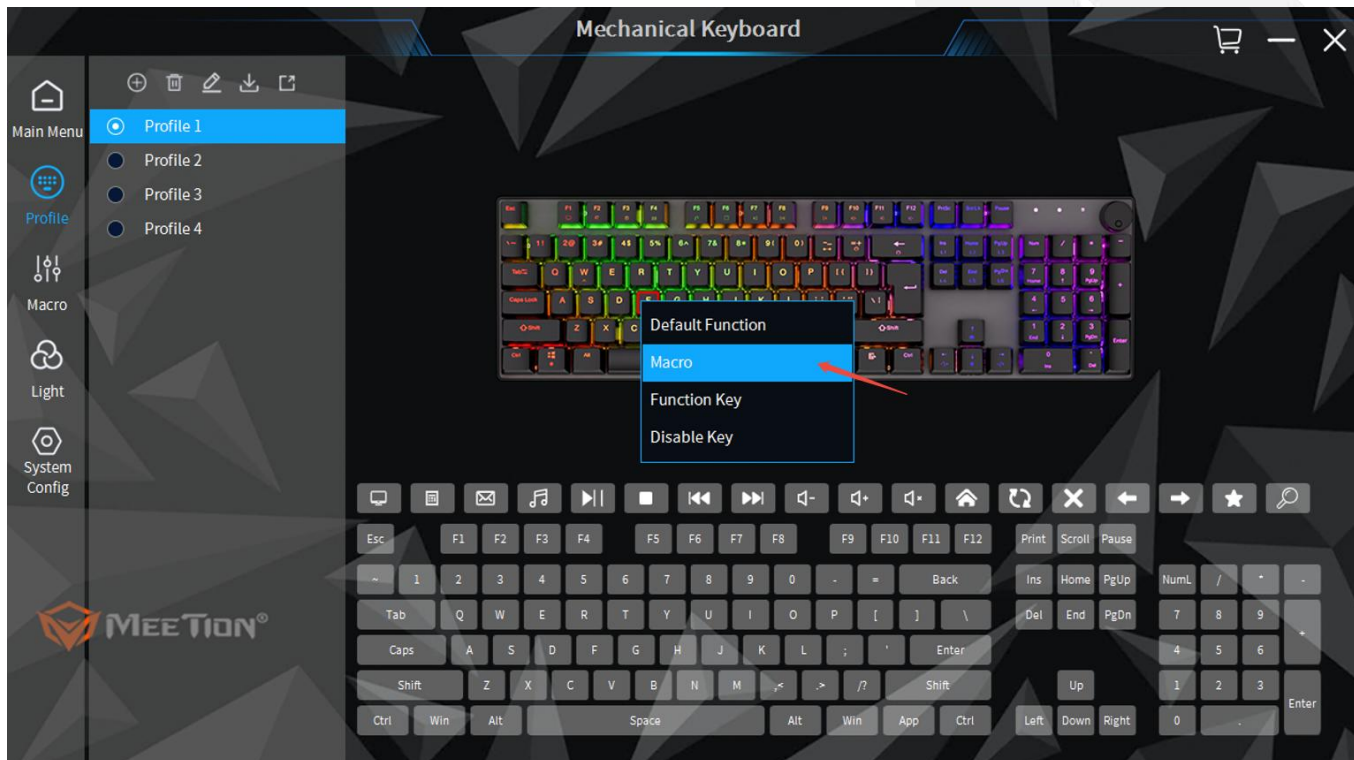


MK009 MACRO SETTING STEPS

MK009宏定义设置步骤

Step 5: Once the **Macro window** pops up, click **Apply** to complete the setup.

步骤五: 弹出宏定义窗口后点击应用即完成。

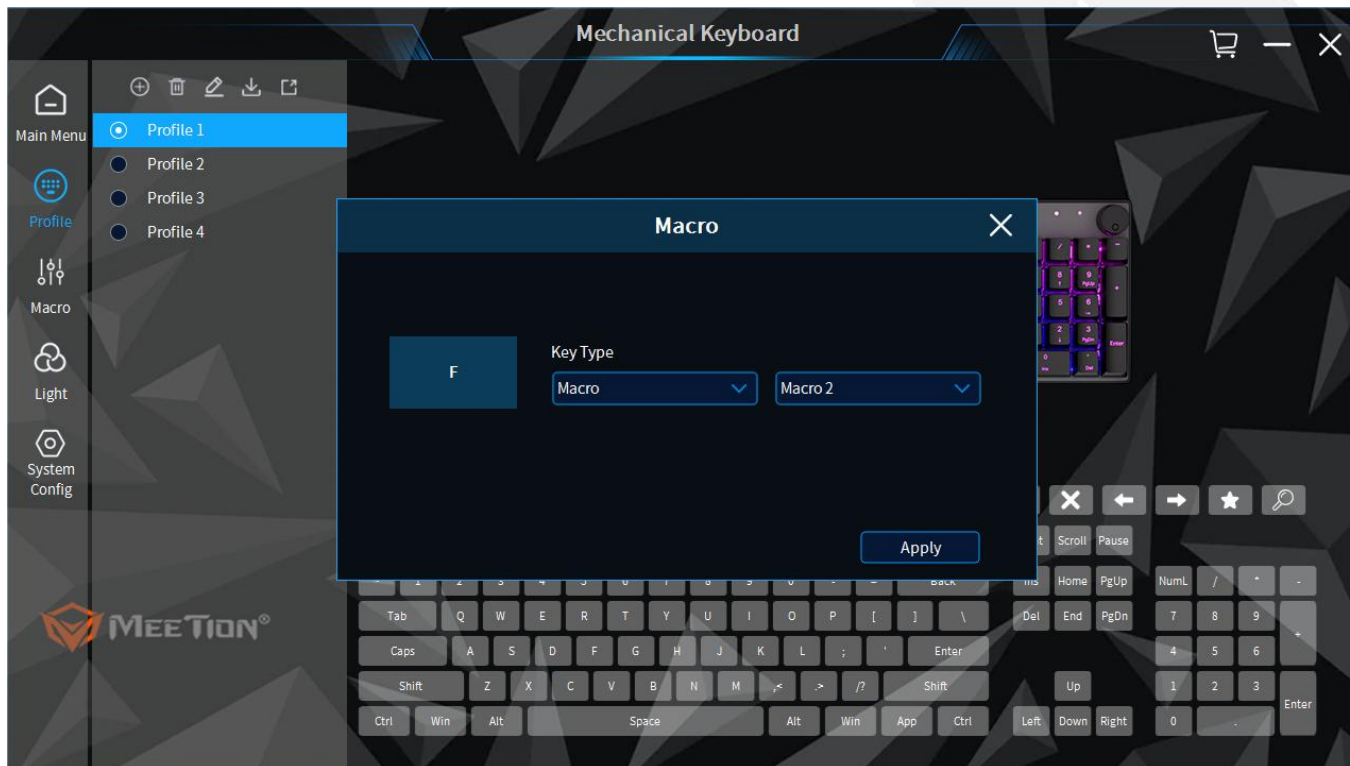


MK009 MACRO SETTING STEPS

MK009宏定义设置步骤

Step6: Open **Notepad** to test the settings. Press the H key to trigger the recorded macro sequence and repeat count. The result should appear as follows:

步骤六: 验证方法打开记事本测试，按H键后触发宏定义设置的几个字母顺序以及重复次数，显示如下：

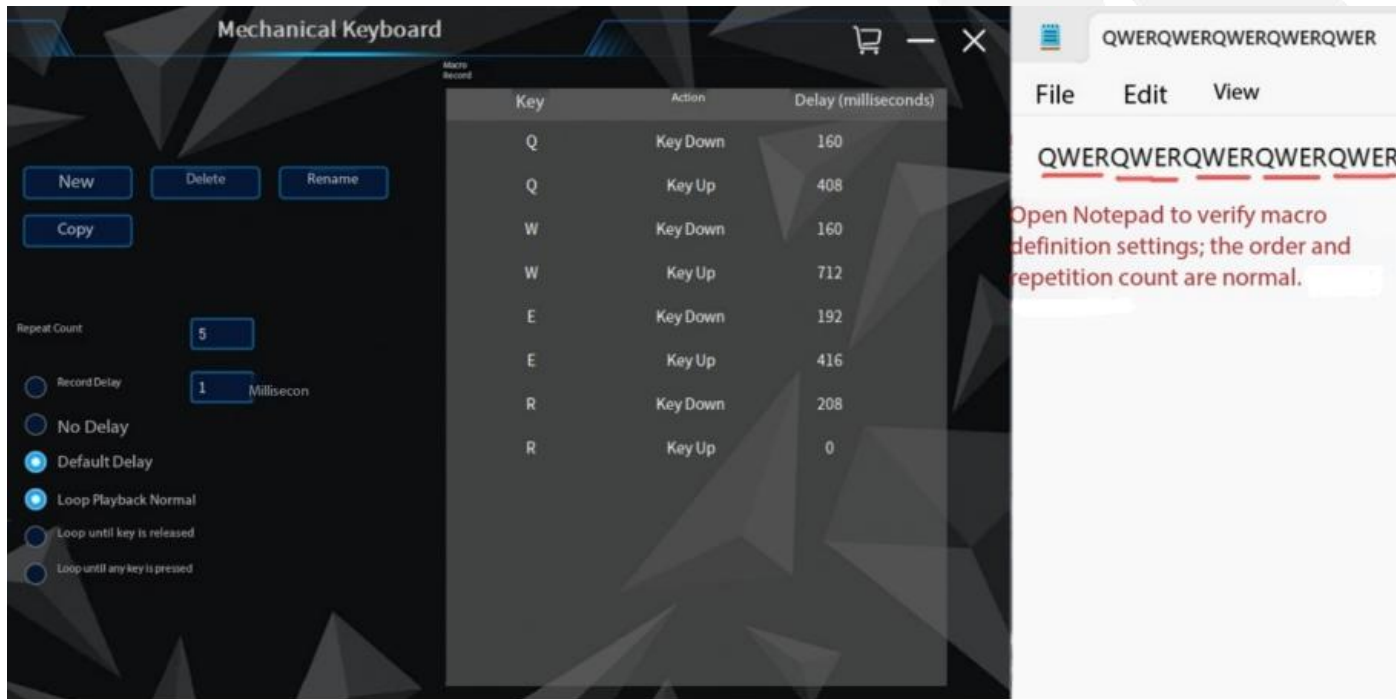

MK009 MACRO SETTING STEPS

MK009宏定义设置步骤

-  **CAUTION:** For daily use where macros are not required, please reset the keys to their default functions to ensure normal operation.
- **注意事项:** 在不需要宏功能的使用场景中, 请将按键设置到普通功能上方可正常使用