 
 


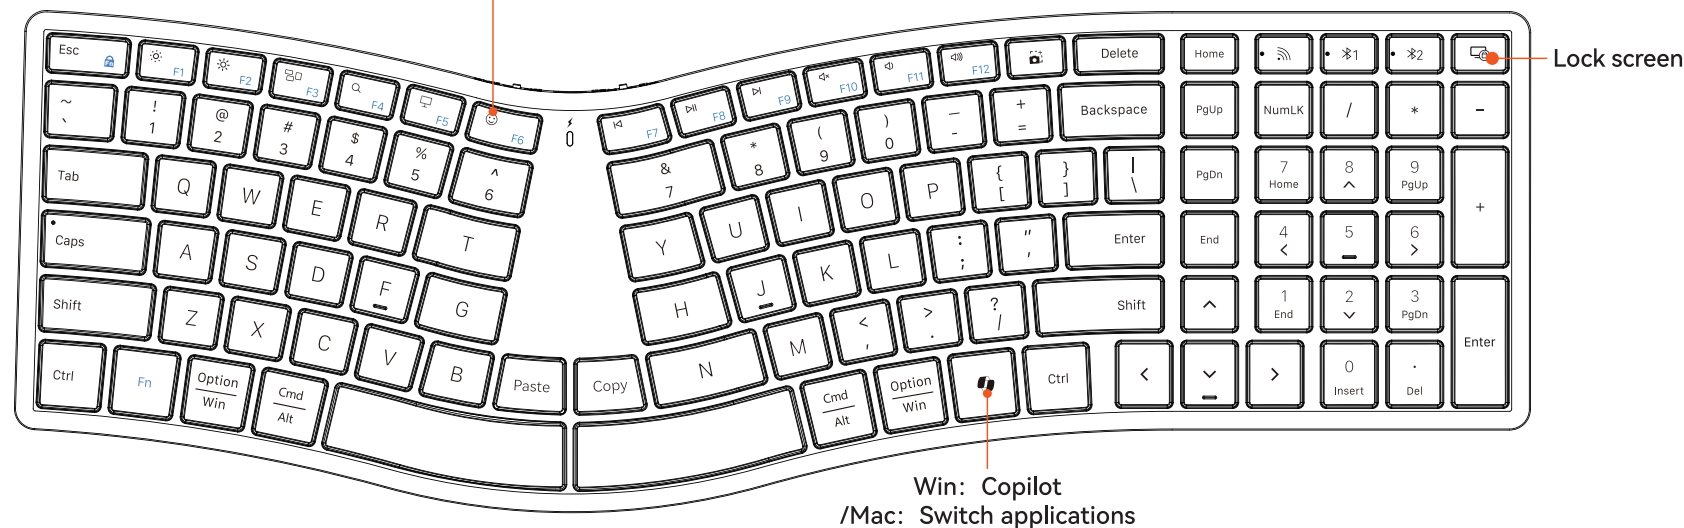

The emoji key function supports Windows, MacBook (macOS), iPad (iPadOS), and Android Samsung devices, but does not support iPhone (iOS).

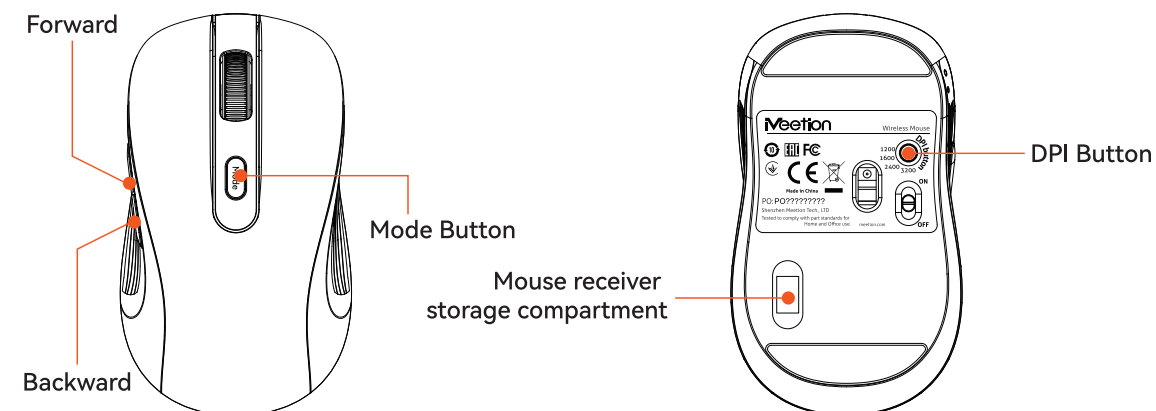 


- ⚠ Windows/Mac systems default to function shortcut keys.(Press Fn+Esc to open/close Fn lock).
- The power switch and the system switch are located at the top of the keyboard.
- Keyboard and mouse share a commou USB receiver.

 


USER'S MANUAL
DirectorQ

Bluetooth instructions

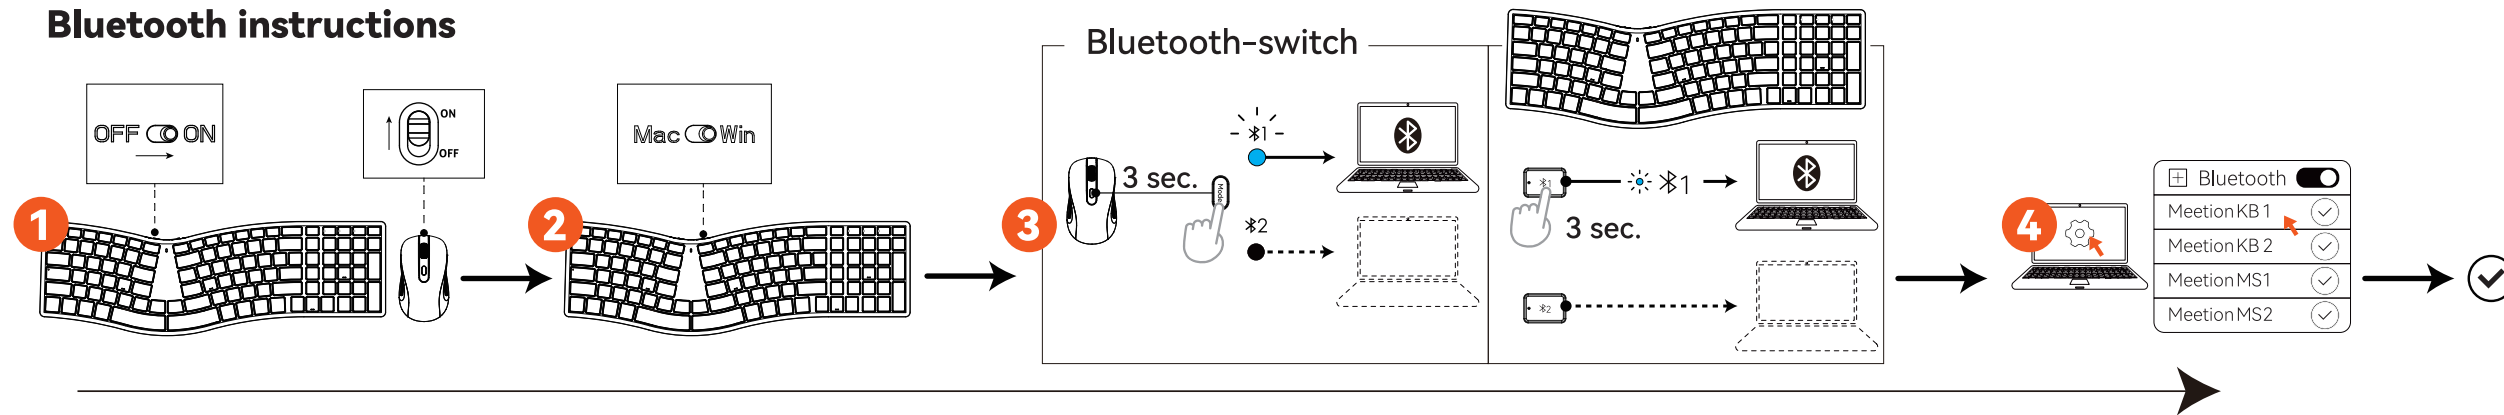

2.4G Mode Instructions (USB Receiver)

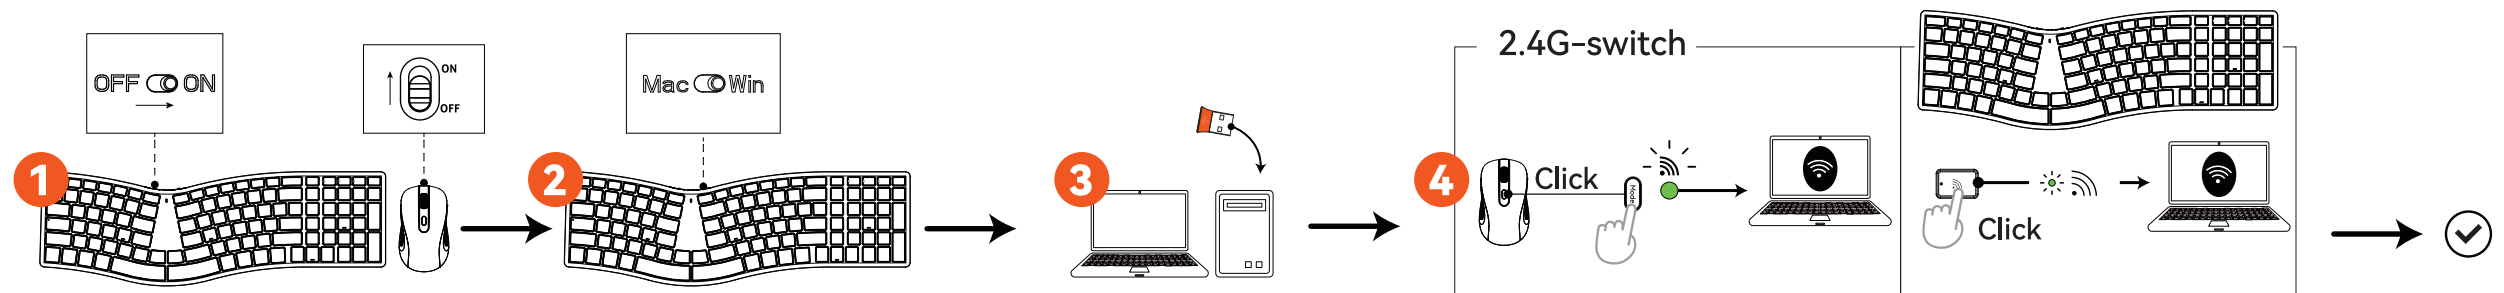

Keyboard

How to reconnect Bluetooth?



Long press *1 / *2 button again to make the blue light blinking, and then you can connect it in the Bluetooth settings!



Mouse

How to reconnect Bluetooth?



Then long press the "Mode Switching Button" so that the blue light blinks, and then connect to it in the Bluetooth settings!

GENERAL

All MEETION brand products comply with US FCC standards (FCC ID: 2A706), EU CE standards/CAUK standards, Bluetooth BQB certification. The product is made in accordance with RoHS standard.

PRECAUTIONS

1. This product contains a rechargeable lithium battery.
- (1) Do not dismantle, strike, crush, or put it into a fire.
- (2) Stop using it immediately if severe swelling occurs.
- (3) Do not place it in a high-temperature environment.
2. Do not use this device near water.
3. Only use a dry cloth to clean this product.
4. Please follow the manufacturer's instructions for use.
5. If the device is damaged, for example, if liquid enters it, if it gets wet in the rain or becomes damp, or if it cannot operate normally, it must be repaired. For repair matters, it should be entrusted to qualified maintenance personnel.

KIND TIPS

If the product is not in use for a long time, it is recommended to charge it every three months to activate the lithium battery inside the product and prevent battery failure due to long periods of non-use.

Troubleshooting:

How to deal with key failure, intermittent repeated input or no response?

1. Clean up the dust and debris under the keycaps, and use a compressed air can to blow away the debris in the gap.
2. Replace the USB interface of the computer and reconnect it to eliminate the problem of poor interface contact.
3. Reboot the devices, turn off the keyboard and restart it.
4. Keep the straight line distance between the receiver and the keyboard within 33 centimeters.

How do I troubleshoot a keyboard that is not compatible with my work computer?

1. Re-insert the USB receiver and plug it in tightly.
 2. Press Win+Q (Windows systems) or Win+W (Mac systems) to switch systems.
 3. The keyboard is compatible with Windows 10/11, macOS 10.12 and higher.
- Not compatible with: Windows 8.1, macOS 10.13 or below, Lite Linux and Customized Linux.

What can I do to improve the noisy keyboard?

1. Adjust your typing habits by pressing keys gently and avoiding hard tapping.
2. Put shock-absorbing pads or silicone pads on the bottom of the keyboard to absorb the vibration transmission when you press the keys.
3. Check whether the keycaps are firmly installed, loose keycaps will increase the crash noise, re-press the keycaps to make sure they are tightly seated.

Meetion

TECHNICAL SUPPORT

Having technical problems with this product?

Send an email to service@meetion.com

For more information please visit:

www.meetion.com