 


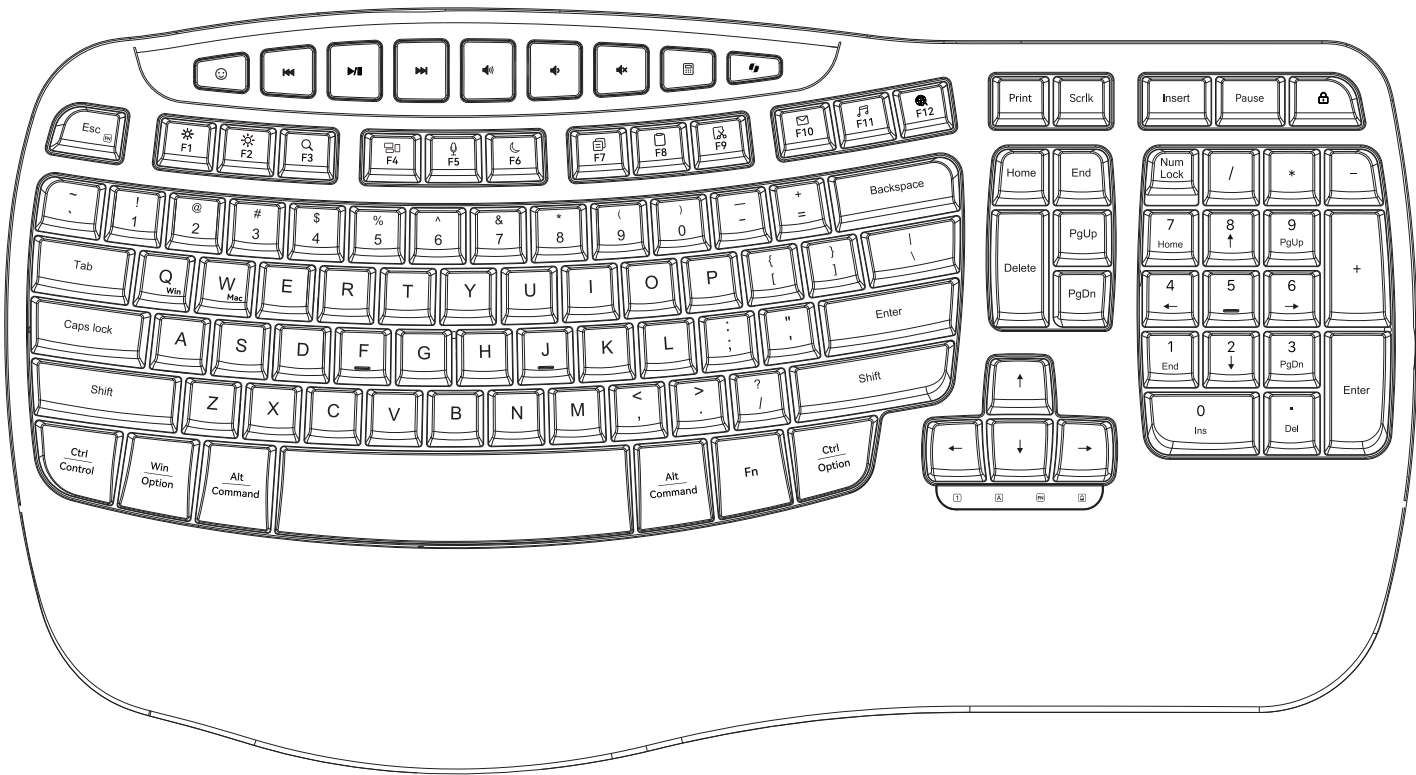

US

CA

UK

USER'S MANUAL

DirectorD_2

Forward

Click:forward.

Backward

Click:backward.

Power Indicator (Low Battery Reminder)

When the battery is low, a red indicator will light up. Please replace the battery with a new one.

DPI Speed Switch Button

Click this button to adjust the speed of the mouse pointer, with four speed levels (DPI): 1200/1600/2400/3200. The default speed level (DPI) is 1600.

⚠ In Mac system, the default shortcut keys are function keys.
⚠ In Windows system, the default shortcut keys are F1-F12.
when Fn lock is closed, you need to press Fn+Shortcut to achieve the shortcut function.(Press Fn+Esc to open/close Fn lock)

	Red light flashing: The keyboard's battery is low.					Emoji		Previous		Volume up		Decrease brightness
	Green light is always on: The NUM keypad is active.					Lock screen		Play&Stop		Volume down		Increase brightness
	Green light is always on: The Caps Lock is activated.					Calculator		Next		Mute		Voice switching
	Green light is always on: The FN Lock is activated.					Email		Music		Search		Win:Copilot/ Mac:Switching Applications
	Application switching		Win: dictate Mac: Siri		Dormant		Copy		Paste		Cut	

⚠ Fn + W: Switch the keyboard to macOS ; Fn + Q: Switch the keyboard to Windows.

Power Switch (ON/OFF)

This up-and-down toggle switch turns the unit on or off.


Battery Compartment

This is the installation position for dry batteries. Please ensure you distinguish between the positive and negative directions.


Mouse receiver storage compartment

We recommend storing the USB receiver in this location when not in use.


Usage instruction

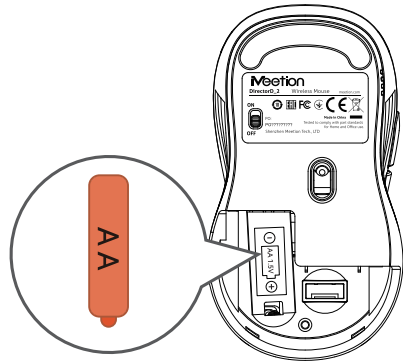


1. Insert the battery into the mouse's battery compartment.

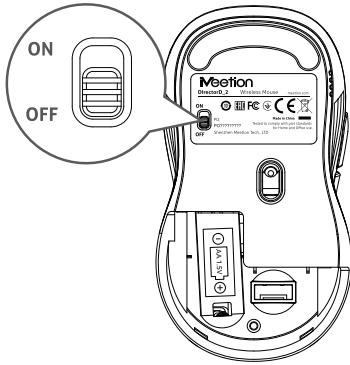


2. Switch the mouse power to the ON position.

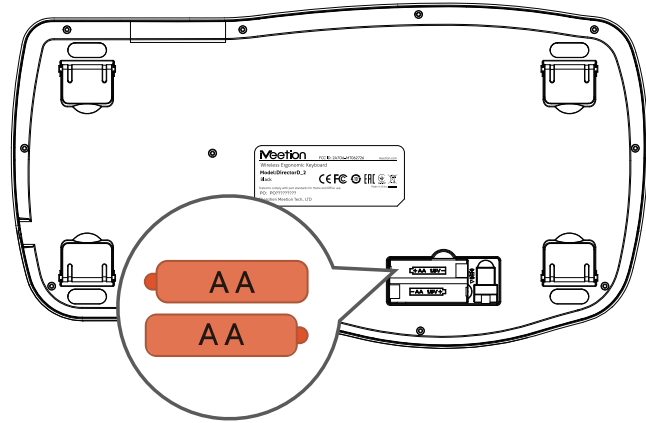


3. Install the batteries into the keyboard battery compartments.

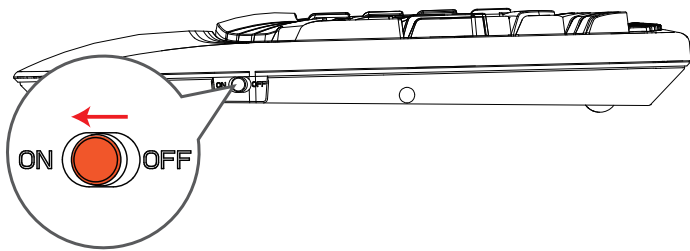

4. Turn the keyboard power switch to the ON position.

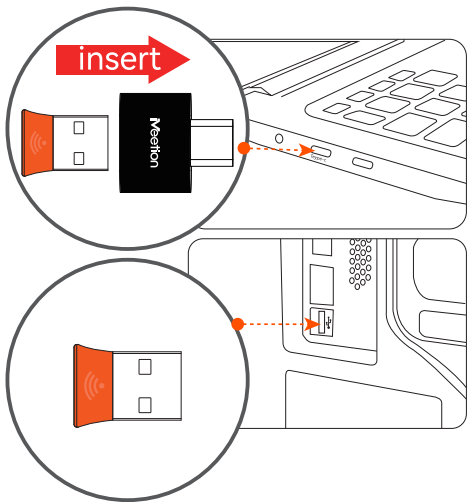

5. Insert the USB receiver into the USB port of the computer.

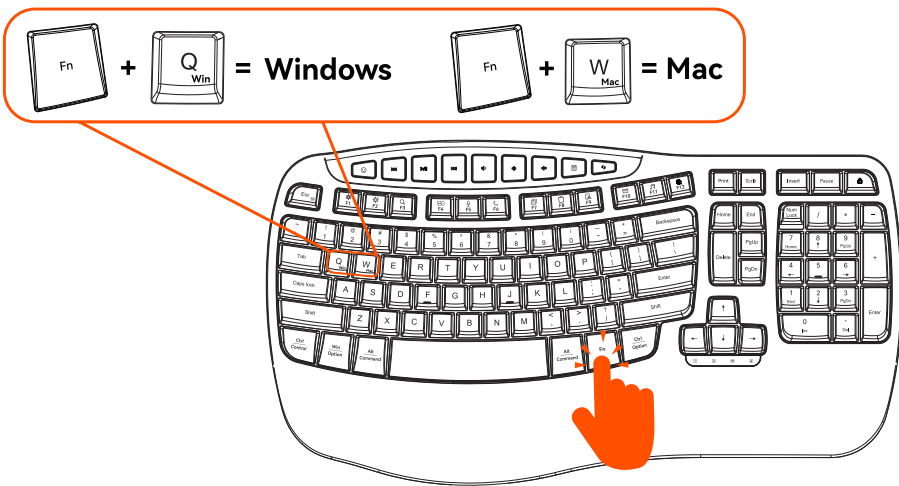

6. Press FN+Q to switch to the Windows system, press FN+W to switch to the Mac system; all indicators will blink three times when the switch is successful.

GENERAL
All MEETION brand products comply with US FCC standards (FCC ID: 2A706-MT062726), EU CE standards, and CAUK standards. The product is manufactured in accordance with RoHS standards.

PRECAUTIONS
1. Do not dismantle, strike, crush, or expose it to fire.
2. Stop using it immediately if severe swelling occurs.
3. Do not place it in a high-temperature environment.
4. Do not use this device near water.
5. Only use a dry cloth to clean this product.
6. Please follow the manufacturer's instructions for use.
7. If the device is damaged (e.g., if liquid enters it, if it gets wet in the rain, or if it becomes damp), or if it does not operate normally, it must be repaired. Repairs should be entrusted to qualified maintenance personnel.

Meetion
TECHNICAL SUPPORT
Having technical problems with this product?
Send an email to service@meetion.com
For more information please visit:
www.meetion.com

! 1. Batteries are not included, so you will need to prepare them yourself. The keyboard and mouse share the same receiver.
2. Please take the receiver out of the accessory bag.