


! The iOS/Android/Windows systems are set to numeric keys by default.

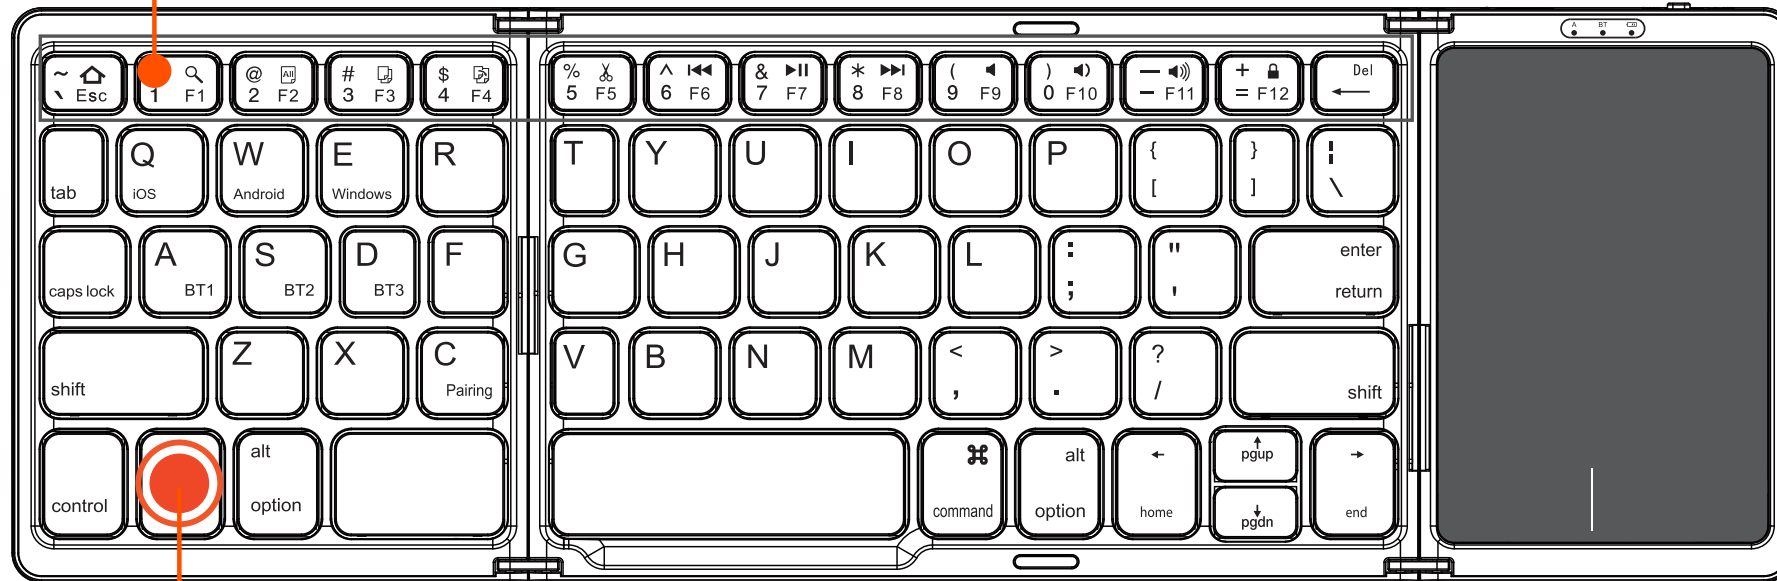

! Before using the keyboard, please confirm that it matches the operating system of the device (computer, phone, etc.) you intend to use it with.

Three system switching languages

iOS : control+Space key

Windows : Alt+Shift

Android : control+Space key / Shift+Space key


Three system input method switch

iOS: control+ Space key

Windows : control+ Shift

Android : control+ Shift

Bluetooth Connection Instructions:

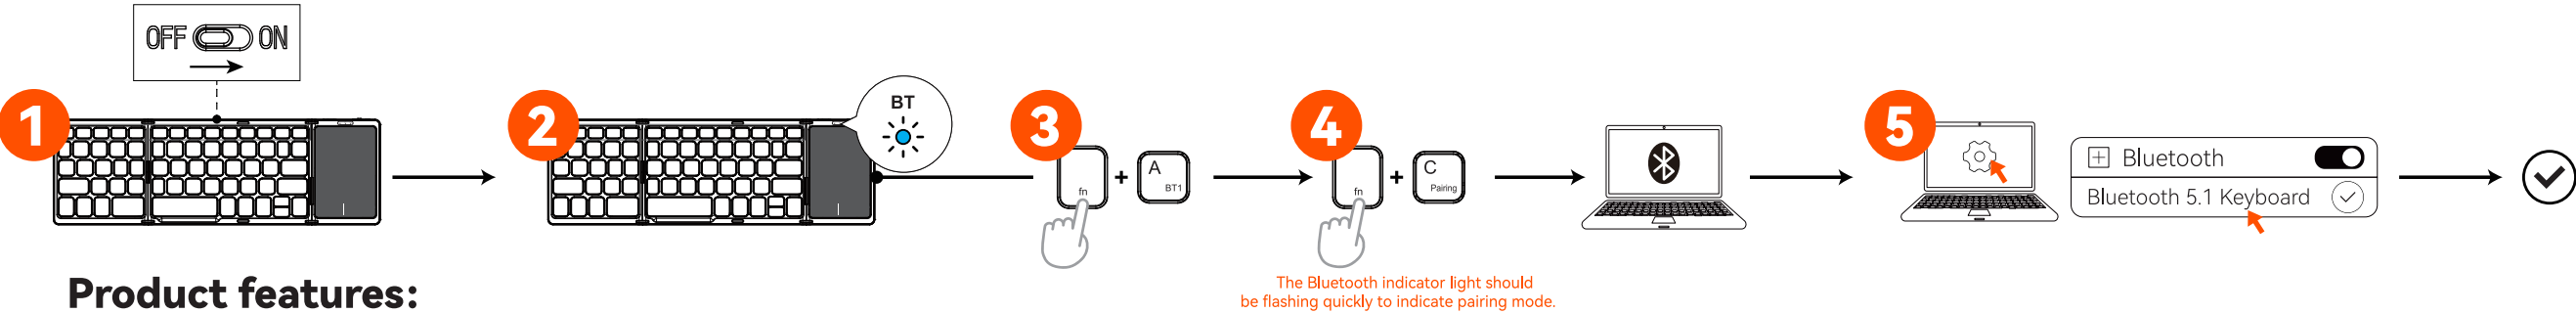

Product features:

iOS/Android

+ = Return to Desk

Function key Corresponding function

•

•

•

By analogy

Windows

+ + = Homepage

Function key Corresponding function

•

•

•

By analogy

+ = Esc + = F1

Function key Corresponding function

•

•

•

By analogy

Touchpad function description:

(Windows10), must beswitched to Windows system

Tap — The left of mouse button	Two-finger separation / collapse — Zoom in / out
Two-finger slides vertically / horizontally — Mouse wheel	Two-finger tap — The right of mouse button
Three-finger tap — Search	Three-finger slide to the left continuously — Switch the active window
Three-finger slides up — Open the browser window	Three-finger slide to the right continuously — Active window switch
Three-finger slides down — Go Home	Four-finger tap — Open the (Actioncenter)

(Android), must beswitched to Android system

Tap — The left of mouse button	Two-finger slides vertically — Mouse wheel
Drag — Mouse cursor	Two-finger tap — The right of mouse button

(iOS 13.4.1 and above), must be switched to iOS system

Tap-Tap (user-defined)	Drag — Mouse cursor
Single finger double tap and then drag — Drag	Two-finger separation / collapse — Zoom in / out
Two-finger slides vertically — Mouse wheel	Two-finger slides horizontally — Slide the desktop left and right
Three-finger slides down — Open all the active windows (Click the Homepage button twice)	Two-finger tap — open the menu (user-defined)
Three-finger slides up — Open/hide the bottom of the application bar	Three-finger tap — Desktop (user-defined)
Three-finger slides right — Active windows	Three-finger slides left — Active windows
Four-finger tap — Screenshots	

User-defined:
Settings - Auxiliary Functions - Touch - Auxiliary Touches - Device - Click the keyboard's pairing name, and then customize the function of 'single finger, Two-finger, Three-finger'.

Keyboard Maintenance

- 1.Please keep the keyboard away from liquid or humid environment, saunas, swimming pool, steam room and don't let the keyboard get wet in the rain.
- 2.Please don't expose the keyboard at too high or too low temperature condition.
- 3.Please don't put keyboard under sun for a long time.
- 4.Please don't put keyboard close to the flame, such as cooking stoves, candles or fireplace.
- 5. Avoid sharp objects scratching products, timely to recharge products to ensure the normal use.