




USER'S MANUAL BTK9550



Keyboard touchpad

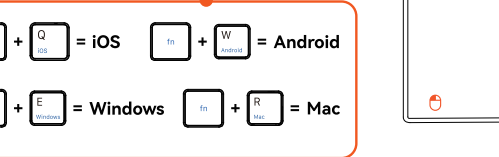

Before using the keyboard, please confirm that it matches the operating system of the device (computer, phone, etc.) you intend to use it with.

Keyboard Indicator Lights

Icon	Indicator	Color	Definition
*1	Bluetooth 1 Channel	Blue	Blue light flashing rapidly: Bluetooth 1 is entering pairing mode. (Long press:Bluetooth button) Blue light flashing slowly: Bluetooth 1 is entering reconnecting mode. The blue light stays on for 5 seconds and then goes off: Successfully reconnected in Bluetooth 1 mode.
*2	Bluetooth 2 Channel	Blue	Blue light flashing rapidly: Bluetooth 2 is entering pairing mode. (Long press:Bluetooth button) Blue light flashing slowly: Bluetooth 2 is entering reconnecting mode. The blue light stays on for 5 seconds and then goes off: Successfully reconnected in Bluetooth 2 mode.
*3	Bluetooth 3 Channel	Blue	Blue light flashing rapidly: Bluetooth 3 is entering pairing mode. (Long press:Bluetooth button) Blue light flashing slowly: Bluetooth 3 is entering reconnecting mode. The blue light stays on for 5 seconds and then goes off: Successfully reconnected in Bluetooth 3 mode.
A	Caps lock	Green	Green light is always on: Caps lock is on.
⚡	Low battery	Red	Red light flashing rapidly: The device is low on power.
	Charging	Green	Green light is on: The device is currently charging. Green light indicator is off: The device is fully charged.

Keys and Function

*1	Bluetooth 1 switch key Single press: Switch to Bluetooth 1 channel.
*2	Bluetooth 2 switch key Single press: Switch to Bluetooth 2 channel.
*3	Bluetooth 3 switch key Single press: Switch to Bluetooth 3 channel.
🔒	Lock the screen

1

fn + [Fn Lock]

= Disable the touchpad feature

2

fn + [esc]

= Fn Lock function

3

fn + [enter]

= Long press restore Bluetooth to factory settings

4

fn + [Q]

= Switch to iOS system

5

fn + [W]

= Switch to Android system

6

fn + [E]

= Switch to Windows system

7

fn + [R]

= Switch to Mac system

8

fn + [home]

= Home

9

fn + [end]

= End

10

fn + [PgUp]

= PgUp

11

fn + [PgDn]

= PgDn

When Fn lock is closed, you need to press Fn+Shortcut to achieve the shortcut function. (Press Fn+esc to open/close Fn lock)

The emoji key function supports Windows, MacBook (macOS), iPad (iPadOS), and Android Samsung devices, but does not support iPhone (iOS).

Keys and Function

Function Keys	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
iOS	Brightness-	Brightness+	Application switching	Search	Screenshot	Emoji	Previous	Play/Pause	Next	Mute	Volume-	Volume+
Android	Brightness-	Brightness+	Application switching	Search	Screenshot	Emoji	Previous	Play/Pause	Next	Mute	Volume-	Volume+
Windows	Brightness-	Brightness+	Application switching	Search	Screenshot	Emoji	Previous	Play/Pause	Next	Mute	Volume-	Volume+
Mac	Brightness-	Brightness+	Application switching	Search	Screenshot	Emoji	Previous	Play/Pause	Next	Mute	Volume-	Volume+

Bluetooth instructions

1. Switch to the "ON" position on the up to turn on the device.

2. Press the *1/*2/*3 key to switch to Bluetooth mode; the corresponding Bluetooth 1 / Bluetooth 2 / Bluetooth 3 indicator light will turn blue and begin to blink.

3. Find the device named "Meetion-KB-BT1" / "Meetion-KB-BT2" / "Meetion-KB-BT3" in your computer's Bluetooth settings and connect it!

Keyboard

How to reconnect Bluetooth?

If you want to reconnect your Bluetooth keyboard, please click *1 / *2 / *3 button to switch to "Bluetooth 1"/"Bluetooth 2"/"Bluetooth 3" mode, and then long press *1 / *2 / *3 button again to make the blue light blinking, and then you can connect it in the Bluetooth settings!

Due to the differences in system versions, the gesture controls may vary.

Before using the keyboard, please confirm that it matches the operating system of the device (computer, phone, etc.) you intend to use it with.

Keyboard System and Function Switching Guide

1. Press FN+Q to switch to the iOS system, press FN+W to switch to the Android system.

2. Press FN+E to switch to the Windows system, press FN+R to switch to the Mac system.

3. Press Fn and the Spacebar to turn the touchpad on or off.

Due to the differences in system versions, the gesture controls may vary.

Before using the keyboard, please confirm that it matches the operating system of the device (computer, phone, etc.) you intend to use it with.

User Manual for Touchpad Functions on Windows System

One Finger

Click: Press with a single finger until you feel a click. Function: Left mouse button.

Swipe: Single-Finger Move. Function: Cursor Sliding.

Tap: Two-Finger Tap. Function: Two-Finger Right Click.






Double Fingers

Swipe: Two-Finger Swipe Up, Down, Left, and Right. Function: Mouse Wheel.

Spread Gesture: The fingers are placed close together, opened to enlarge. Function: Zoom In.

Pinch Gesture: The fingers are placed close together, pinched to shrink. Function: Zoom Out.

Three Fingers

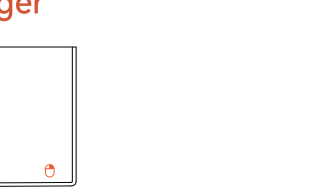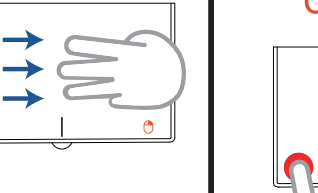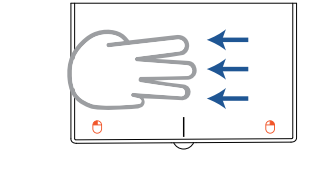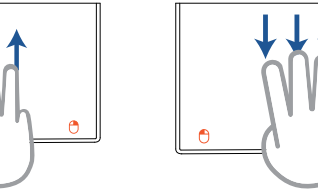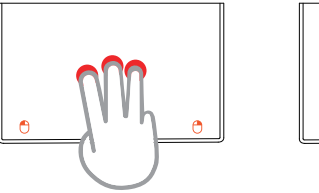

Tap: Three-Finger Tap.
Function: Search function.


Swipe: Swipe up with three points, pause and then lift your finger.
Function: Arrange Current Applications.
Shortcut Key: WIN+TAB.

Swipe: Swipe down with three points, pause and then lift your finger.
Function: Show Desktop.
Shortcut Key: WIN+D.

Swipe: Three-Finger Left Swipe.
Function: Switch Active Window to the Left.
Shortcut Key: Alt+ Shift+Tab.

Swipe: Three-Finger Right Swipe.
Function: Switch Active Window to the Right.
Shortcut Key: Alt+Tab.




Four Finger

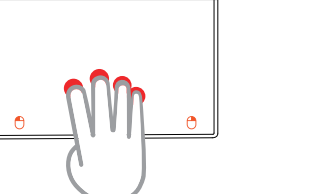

Tap: Four-Finger Tap.
Function: Open Action Center.
Shortcut Key: WIN+A.

User Manual for Touchpad Functions on iOS System(Custom settings)

One Finger



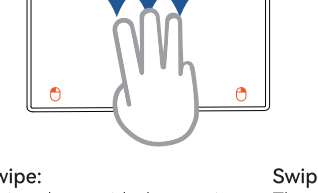
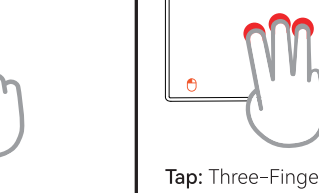
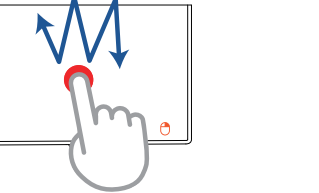


Click: Press with a single finger until you feel a click.
Function: Single Point (Custom).

Swipe: Single-Finger Move.
Function: Cursor Sliding.

Lightly tap twice with one finger, then hold and slide: Point and hold the item, then change it with your finger on the trackpad to move.
Function: Drag and drop.

Double Fingers

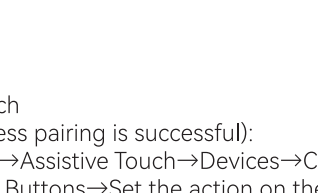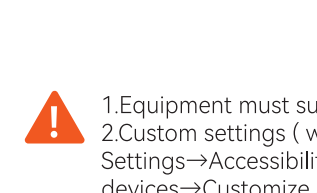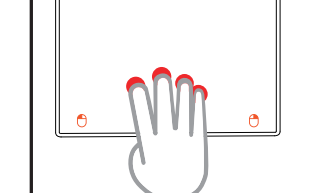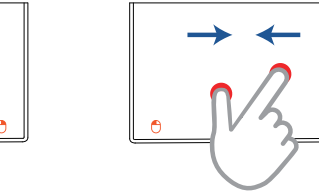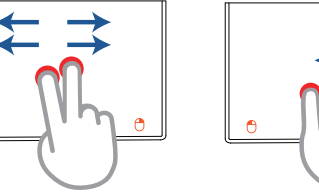

Tap: Two-Finger Tap.
Function: Two-Finger Right Click.


Swipe: Two-Finger Swipe Up, Down, Left, and Right.
Function: Mouse Wheel.

Swipe: Two-finger swipe left and right.
Function: Mouse left and right on the screen.

Spread Gesture: The fingers are placed close together, opened to enlarge.
Function: Zoom In (Web page).

Pinch Gesture: The fingers are placed close together, pinched to shrink.
Function: Zoom Out (Web page).


Four Finger

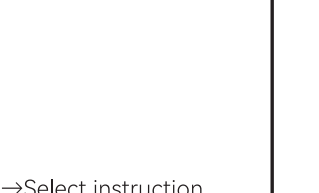






Tap: Four-Finger Tap.
Function: Regional screenshot.
Shortcut Key: Cmd+Shift+3.

1.Equipment must support touch

2.Custom settings (when wireless pairing is successful): Settings→Accessibility→Touch→Assistive Touch→Devices→Connected devices→Customize Additional Buttons→Set the action on the trackpad→Select instruction

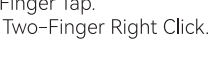 +  Turn on/off touchpad function

Three Fingers

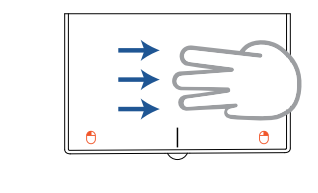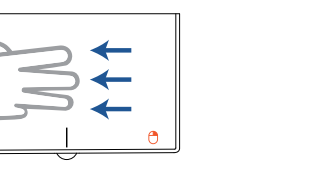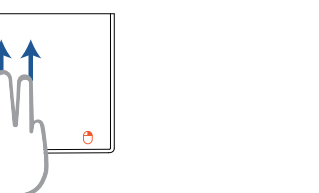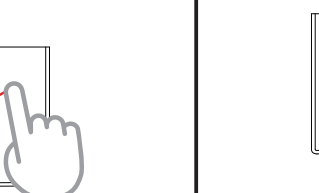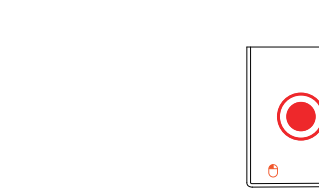

Tap: Three-Finger Tap.
Function: Home screen (Custom).


Swipe: Swipe up with three points, pause and then lift your finger.
Function: Show/Hide the bottom app bar.
Shortcut Key: Cmd+Alt+D.

Swipe: Swipe down with three points, pause and then lift your finger.
Function: Open all active windows (double tap the home button).
Shortcut Key: Cmd+Shift+Tab.

Swipe: Three-Finger Left Swipe.
Function: Switch Active Window to the Left.
Shortcut Key: Cmd+Shift+Tab.

Swipe: Three-Finger Right Swipe.
Function: Switch Active Window to the Right.
Shortcut Key: Cmd+Tab.



Four Finger

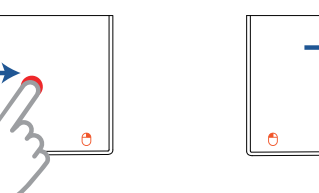

Tap: Four-Finger Tap.
Function: Regional screenshot.
Shortcut Key: Cmd+Shift+3.



1.Equipment must support touch

2.Custom settings (when wireless pairing is successful): Settings→Accessibility→Touch→Assistive Touch→Devices→Connected devices→Customize Additional Buttons→Set the action on the trackpad→Select instruction

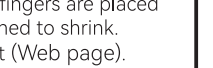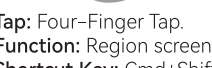 +  Turn on/off touchpad function

User Manual for Touchpad Functions on Mac System

One Finger


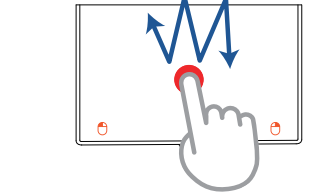
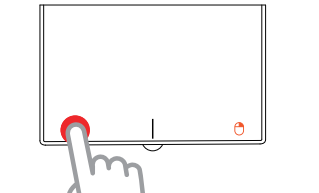


Click: Press with a single finger until you feel a click.
Function: Left mouse button.

Swipe: Single-Finger Move.
Function: Cursor Sliding.

Lightly tap twice with one finger, then hold and slide: Point and hold the item, then change it with your finger on the trackpad to move. it.
Function: Drag and drop.

Double Fingers

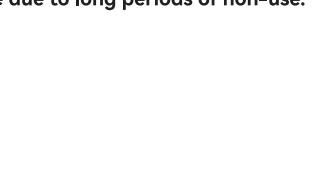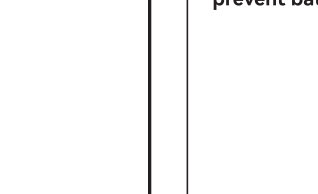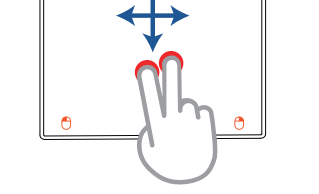


Tap: Two-Finger Tap.
Function: Two-Finger Right Click.

Swipe: Two-Finger Swipe Up, Down, Left, and Right.
Function: Mouse Wheel.

Spread Gesture: The fingers are placed close together, opened to enlarge.
Function: Zoom In (Web page).


Pinch Gesture: The fingers are placed close together, pinched to shrink.
Function: Zoom Out (Web page).

Four Fingers

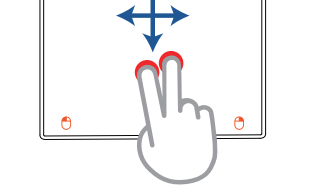

Tap: Four-Finger Tap.
Function: Region screenshot.
Shortcut Key: Cmd+Shift+4.

Three Finger


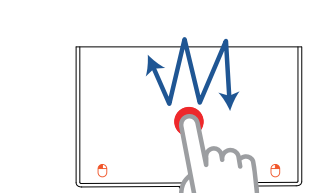


Swipe: Swipe up with three points, pause and then lift your finger.
Function: Show/Hide the bottom app bar.
Shortcut Key: Cmd+Alt+D.

Swipe: Three-Finger Left Swipe.
Function: Switch Active Window to the Left.
Shortcut Key: Cmd+Shift+Tab.

Swipe: Three-Finger Right Swipe.
Function: Switch Active Window to the Right.
Shortcut Key: Cmd+Tab.

One Finger

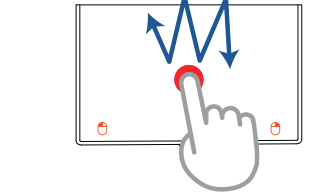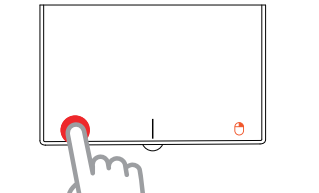

Click: Press with a single finger until you feel a click.
Function: Left mouse button.

Swipe: Single-Finger Move.
Function: Cursor Sliding.

GENERAL
All MEETION brand products comply with US FCC standards (FCC ID: 2A7O6), EU CE standards/CAUK standards, Bluetooth BQB certification.The product is made in accordance with RoHS standard.

PRECAUTIONS
1.This product contains a rechargeable lithium battery.
(1)Do not dismantle,strike,crush,or put it into a fire.
(2)Stop using it immediately if severe swelling occurs.
(3)Do not place it in a high-temperature environment.
2.Do not use this device near water.
3.Only use a dry cloth to clean this product.
4.Please follow the manufacturer's instructions for use.
5.If the device is damaged,for example,if liquid enters it,if it gets wet in the rain or becomes damp,or if it cannot operate normally,it must be repaired.For repair matters,it should be entrusted to qualified maintenance personnel.

KIND TIPS
If the product is not in use for a long time,it is recommended to charge it every three months to activate the lithium battery inside the product and prevent battery failure due to long periods of non-use.

Meetion
TECHNICAL SUPPORT
Having technical problems with this product?
Send an email to service@meetion.com
For more information please visit:
www.meetion.com